 


Control Knob Functions

POWER ON/OFF

Push and hold
2 seconds



PLAY/PAUSE

Push once



TOGGLE AUX / BLUETOOTH® MODES

Push 2X



LED indicator when in AUX mode;
no control knob functions

VOLUME DOWN

Turn left and hold



VOLUME UP

Turn right and hold



PREVIOUS TRACK

Quick turn left



NEXT TRACK

Quick turn right

